

		Basic	Braid+Sheath	Basic	Braid+Sheath	Basic	Braid+Sheath	Basic	Braid+Sheath	Basic	Braid+Sheath		
		-1A and -2A	-1ABS and	-1B and -2B	-1BBS and	-1C and -2C	-1CBS and	-2D	-2DBS				
MAX. CIRCUIT LENGTH (M)													
Start-up temperature		-30°C	-20°C	+10°C	-30°C	-20°C	+10°C	-30°C	-20°C	+10°C	-30°C	-20°C	+10°C
110 V	C.B. (C Type)												
	10A	37	42	77	24	27	51	19	21	33			
	13A	48	55	100	31	35	66	25	28	43			
	16A	59	67	100	38	44	82	30	34	53			
	20A	73	84	100	47	55	82	38	42	64			
	25A	92	100	100	59	68	82	47	53	64			
230 V	C.B. (C Type)												
	10A	69	79	145	41	49	105	39	44	71	47	50	63
	13A	90	103	188	53	63	137	51	57	93	61	65	82
	16A	111	127	200	66	78	165	62	70	114	75	80	101
	20A	-	-	-	82	97	165	78	88	125	93	100	110
	25A	-	-	-	103	122	-	97	110	125	110	110	110

ANCILLARIES	New description
Frostguard termination kit + end seal	TSL-I-M20
Insulation entry kit	LSL-I
Junction box (no termination included)	HA-1
Pipe mounting bracket	JB-SB-08 (no pipe straps incl.)
Tape PVC (19 mm x 25 m)	Tapes-Frostfix
Tape glass fibre (12 mm x 20 m roll)	Tapes-GT-66
Aluminium tape (63.5 mm x 55 m/ roll)	ATE-180
Weatherproof thermostat	TSW-Froststat
Warning label	LAB-ISOPAD-RED

		Pipe diameter	
		mm	inches
Pipe straps	PSE-047	Ø 20-47	1/2" - 1 1/4"
	PSE-090	Ø 40-90	1 1/4 - 3"
	PSE-280	Ø 60-288	2" - 10"
	PSE-540	Ø 60-540	2" - 20"

All of the above information, including illustrations, is believed to be reliable. Users however, should independently evaluate the suitability of each product for their application. Tyco Thermal Controls makes no warranties as to the accuracy or completeness of the information and disclaims any liability regarding its use. Tyco Thermal Controls only obligations are those in the Standard Terms and Conditions of Sale for this product and in no case will Tyco Thermal Controls be liable for any incidental, indirect or consequential damages arising from the sale, resale, use or misuse of the product. Tyco Thermal Controls Specifications are subject to change without notice. In addition Tyco Thermal Controls reserves the right to make changes in materials or processing, without notification to the Buyer, which do not affect compliance with any applicable specification.

www.tycothermal.com

tyco
Flow Control

Tyco Thermal Controls

We manage the heat you need

Tyco Thermal Controls GmbH
Englerstrasse 11
D-69126 Heidelberg
GERMANY
Tel.: +49 (62 21) 30 43-950
Fax: +49 (62 21) 30 43-956

Tyco Electronics Raychem N.V.
Tyco Thermal Controls
Diestsesteenweg 692
B-3010 Kessel-Lo
Phone: +32 (0) 16 35 39 00
Fax: +32 (0) 16 25 27 26

Tyco Thermal Controls
Faraday Road
Dorcan, Wiltshire
SN3 5HH
Phone: (01793) 572 663
Fax: (01793) 572 629